

# **4soft** Installation guide – 2D graphics



**Needed tools and material for gluing.**



**Needed tools to measure out requested graphic.**



**Measure out and copy graphic on cured SBR layer along with requested design.**





**Mix properly two component glue (can be ordered together with graphics). Use standard PU glue for artificial grass. Two component glue, use for bigger patterns or more graphics.**



**To stick small graphics use one-component glue in cartridges or salami. For example Proline T44 or Extrem FIX.**



**Spread glue evenly on underside of your graphic.**






**Make sure the glue is spread evenly and to the edge !!!**



**TAKE CARE ABOUT UPPER SIDE OF GRAPHIC COMPONENT TO AVOID STAIN OF GLUE ON IT !!!**

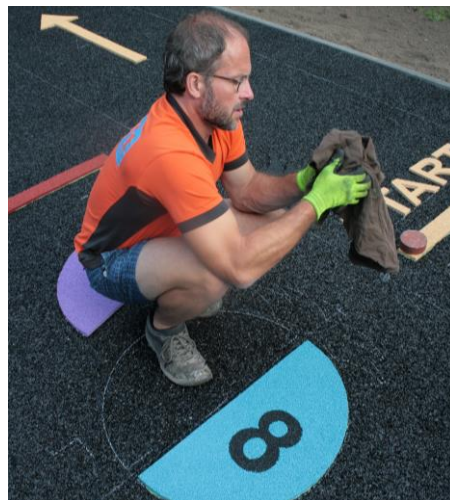


**Make sure your gloves are always clean – use cloth to wipe them !!!**





**Place graphic exactly and press properly to improve the glue distribution.**

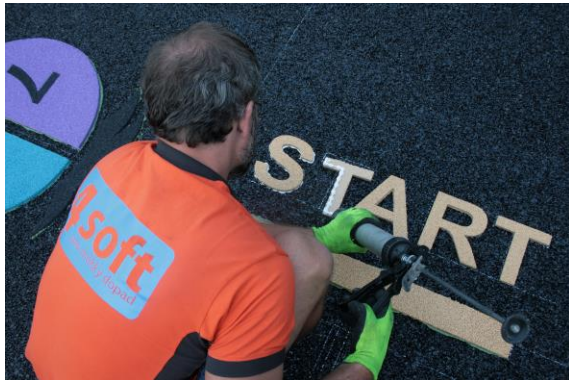

**To stick small graphics use one-component glue. It is also convenient for small repairs or fixing.**



**Weight down the graphic if needed (sometimes the edges of graphic component might stick out).**






**Weight down the graphic if needed. After sticking the glue must be always little squeezed out of graphic edge.**



**Apply the thick binder on outside edges of component to avoid edge separation from the rest of the EPDM on the top layer. TAKE CARE ABOUT UPPER SIDE OF COMPONENT TO AVOID STAIN OF YELLOWING BINDER ON IT!**

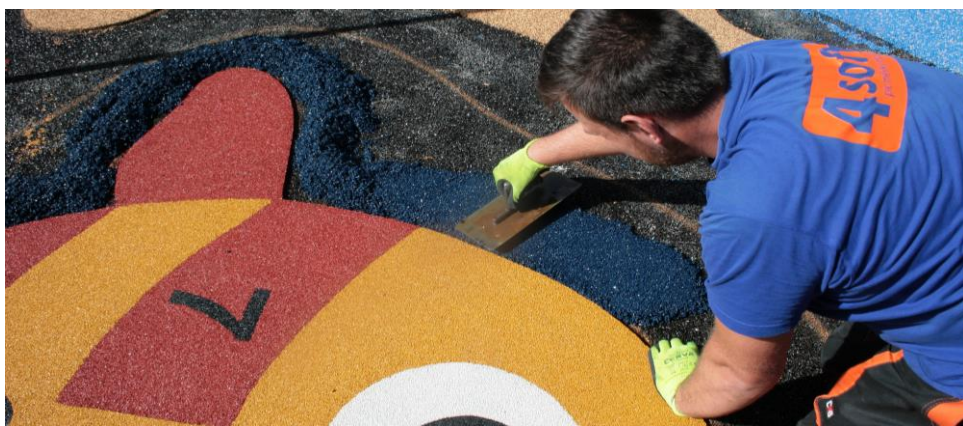

**Spread and compress properly your final EPDM coat around the component.**